

## V2 Remote



### Remote information:


This remote requires 3 x AAA Batteries in order to function.

### How do I put the batteries in the remote?

At the back of the remote, remove the battery cover to expose the battery compartment. Insert 3 x AAA batteries.

The positive side of the battery will always go against the flat surface in the remote.

The negative end of the battery will always go against the spring in the remote.

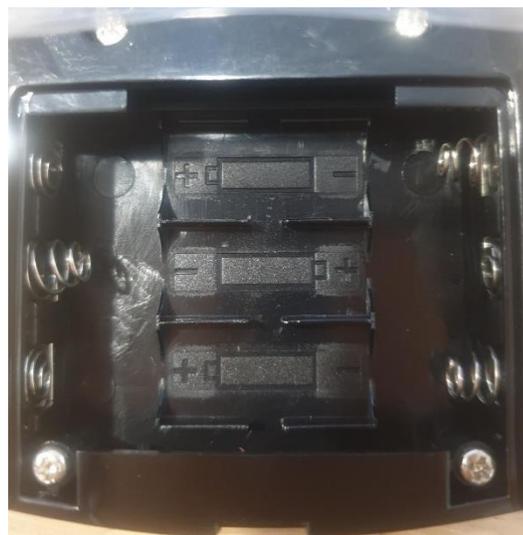

### **How do I pair/sync the remote to the bed?**

---

Your bed should contain a grey control box under the bed, this is what the remote is pairing/syncing to.

**Step 1:** Gently put the bed on its side.

**Step 2:** Expose the remote pairing point, either move the control box to the left side of the clip or cut the cable tie & remove it from the clip.

**Step 3:** Place the remote on the pairing point & move it around.

**Step 4:** You should hear a beep which indicates the remote is paired, press any button on the remote to check the pairing.

-Repeat steps 2 & 3 if unsuccessful.

If pairing a dual system, you will need to pair one bed at a time.

Make sure the power is off for the side that you are not trying to pair.

Once paired, switch the power off and then move to the other bed and switch the power on and pair.

You will need to make sure the remote is rubbing the pairing symbol on the control box.

### **How to save and set MYZONE:**

---

- Using the remote, adjust the bed into the position you would like to save.
- Once in desired position, press and hold MYZONE for approx. 10 seconds or until you hear a beep.

### **How to save and set SEMI-FOWLER:**

---

- Using the remote, adjust the bed into the position you would like to save.
- Once in desired position, press and hold MYZONE for approx. 10 seconds or until you hear a beep.

### **How to save and set ZERO G:**

---

- Using the remote, adjust the bed into the position you would like to save.
- Once in desired position, press and hold MYZONE for approx. 10 seconds or until you hear a beep.

### **REMINDER:**

---

If you hold the MYZONE/SEMI-FOWLER or ZERO G button for too long it will save the position it is in.

### **Padlock Symbol:**

---

Sometimes a padlock symbol on the remote will appear and this will limit some of the functions.

How? If you hold down a button for too long it will lock.

To unlock: PRESS & HOLD one of the buttons until the lock symbol changes to unlocked.